

DENON[®]

DHT-S216

SOUND BAR

Quick Start Guide

Guide de démarrage rapide / Guía de inicio rápido

Read Me First....

Lisez-moi en premier.... / Lea esto primero....

ENGLISH

FRANÇAIS


ESPAÑOL

Welcome

Thank you for choosing a Denon Sound bar.
This guide provides step-by-step instructions for setting up your Sound bar.

Before You Begin

What You Need

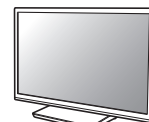


TV



- These drawings are for illustrative purposes only and may not represent the actual product(s).

 What's In the Box




Sound bar



Quick Start Guide



 
Safety Instructions



Cautions on Using Batteries



 
Warranty



Wall mount template



Power cord

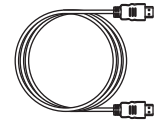

HDMI cable



Optical digital cable



Wall mount spacers




Remote control unit
(RC-1236)



R03/AAA battery

Installing battery in the remote control unit

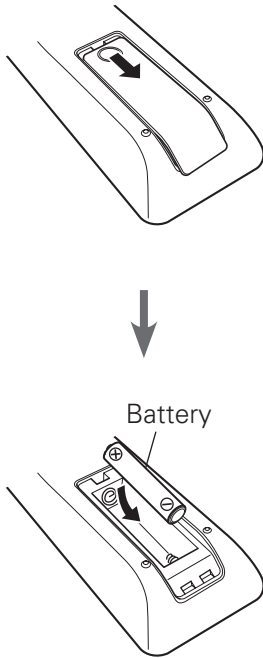


Setup

There are five steps to the setup process.


- 1** Placing the Sound bar
- 2** Connecting the Sound bar to TV
- 3** Connecting the power cords to AC outlet
- 4** Using the Sound bar for TV sound
- 5** Using the Sound bar for Bluetooth music streaming

1 Placing the Sound bar

Place the Sound bar in front of the TV.

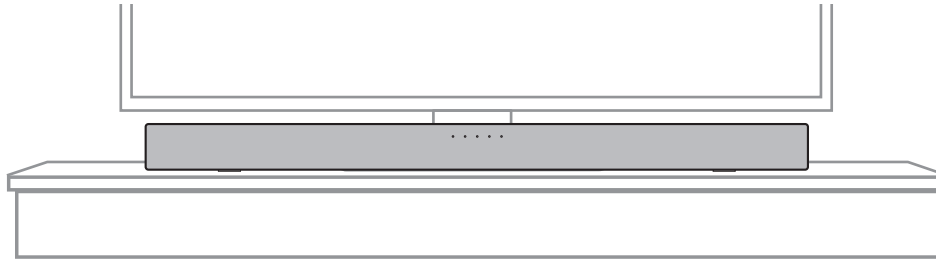


- The Sound bar can also be mounted to a wall. Refer to the included wall mount template for details on how to mount.
- If you want to mount your Sound bar on a wall, refer to “When hanging the sound bar on a wall” in the Owner’s Manual or contact the store where you purchased it.

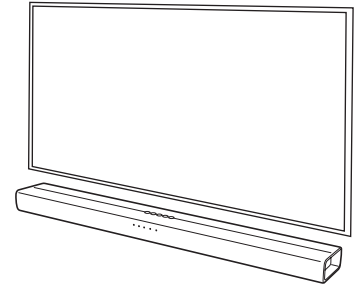


2 Connecting the Sound bar to TV

For TVs with ARC (Audio Return Channel) support, connect the Sound bar to the TV with the included HDMI cable.

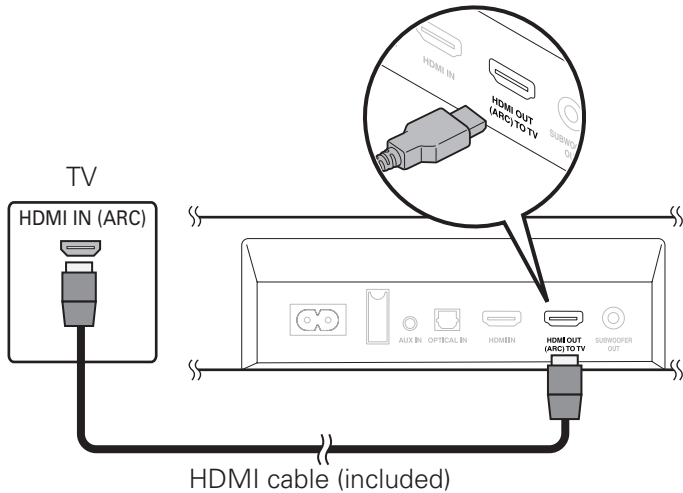


- If the TV does not support ARC, connect it to the Sound bar using the included HDMI cable and optical digital cable.

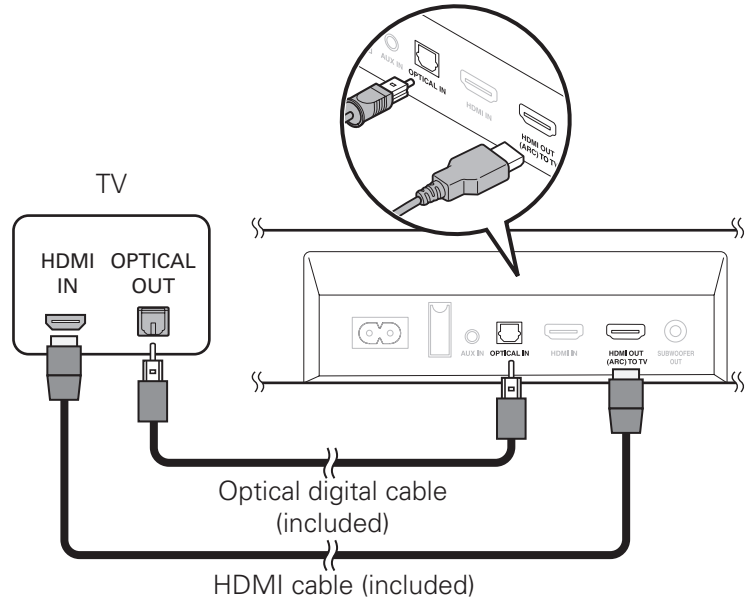


3 Connecting the power cords to AC outlet

Connect the included power supply cord to the Sound bar, and insert the plugs into an outlet.

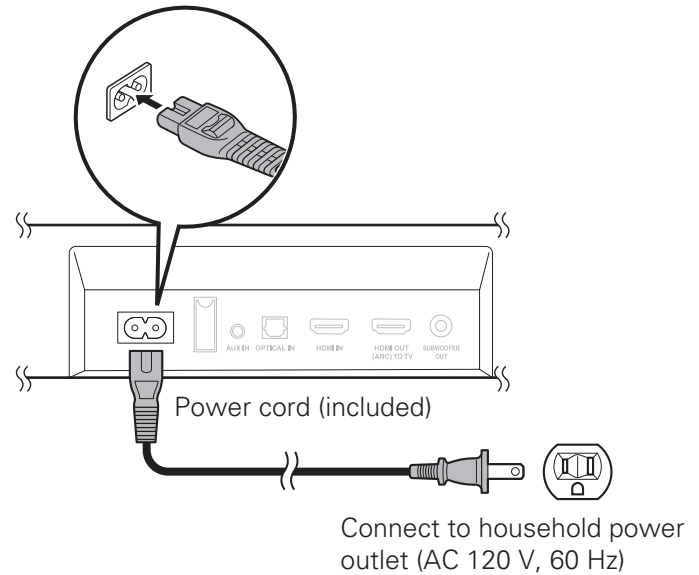

4 Using the Sound bar for TV sound


Turn on your TV.

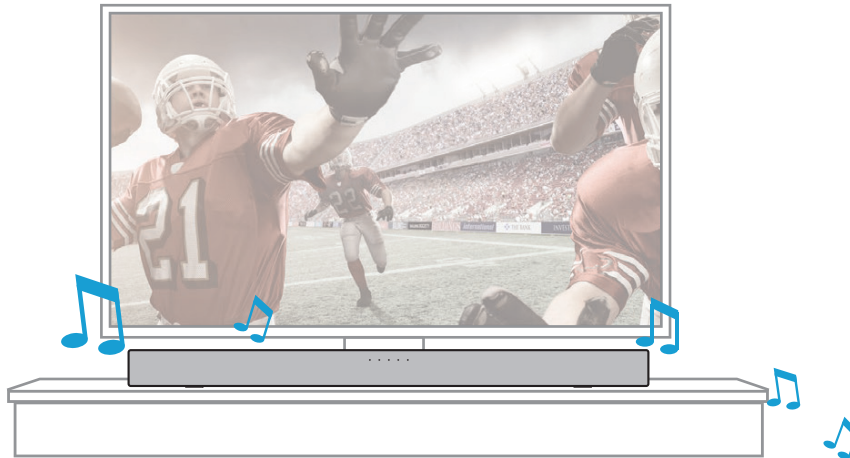

- If you hear audio coming from TV's internal speaker, make sure TV speaker off or min volume.

About the status display LEDs

The LEDs on the Sound bar indicate volume, input source, listening mode and other status information.

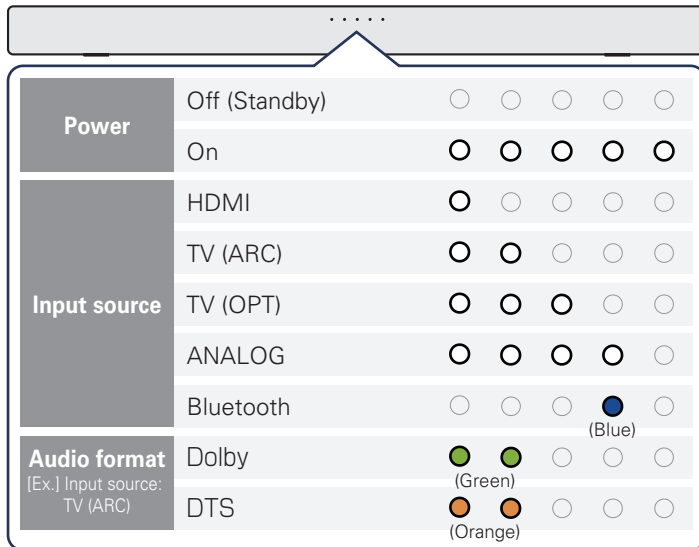


The diagram shows a sound bar with a callout box detailing the LED status legend. The legend is organized into three categories: Power, Input source, and Audio format. Each category lists a status and its corresponding LED indicators (circles).


Category	Status	LED 1	LED 2	LED 3	LED 4	LED 5
Power	Off (Standby)	○	○	○	○	○
	On	○	○	○	○	○
Input source	HDMI	○	○	○	○	○
	TV (ARC)	○	○	○	○	○
	TV (OPT)	○	○	○	○	○
	ANALOG	○	○	○	○	○
	Bluetooth	○	○	○	● (Blue)	○
Audio format [Ex.] Input source: TV (ARC)	Dolby	● (Green)	● (Green)	○	○	○
	DTS	● (Orange)	● (Orange)	○	○	○

5 Using the Sound bar for Bluetooth music streaming

Before you can stream music from your Bluetooth device to the Sound bar, you must first “pair” the Sound bar and your device.


- ① Press the  (Bluetooth) button on the Sound bar (or remote control unit) until the Bluetooth LED blinks in blue. Sound bar will go into the pairing mode.
- ② Go to the Bluetooth settings on your device and make sure Bluetooth is turned ON.
- ③ Select “DHT-S216”.

The Bluetooth LED turns blue to indicate that the Sound bar is being paired with your Bluetooth device.

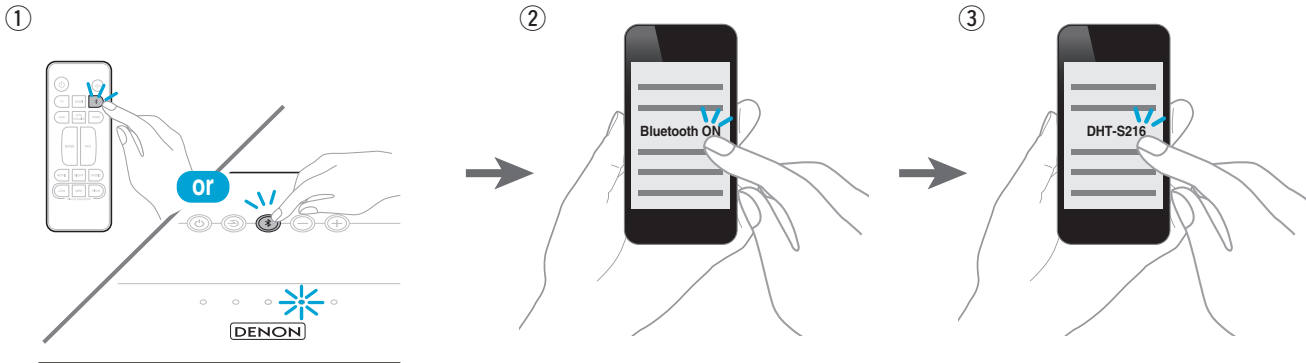

Owner's Manual

- For more information, visit **www.denon.com**
- Refer to the Online Manual for other functions information and operation procedure details.
manuals.denon.com/DHTS216/NA/EN/

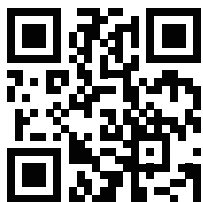

Online Manual



DENON®
www.denon.com

Printed in China 5411 11795 00AD
Copyright © 2019 D&M Holdings Inc. All Rights Reserved.